


# New Power Saving Function ECO Night Sensor

This machine is equipped with the ECO Night Sensor function, which turns off the machine when it detects a decrease in the ambient light level. You can conserve the machine's electricity consumption by lowering the machine's standby power to nearly 0 watt.

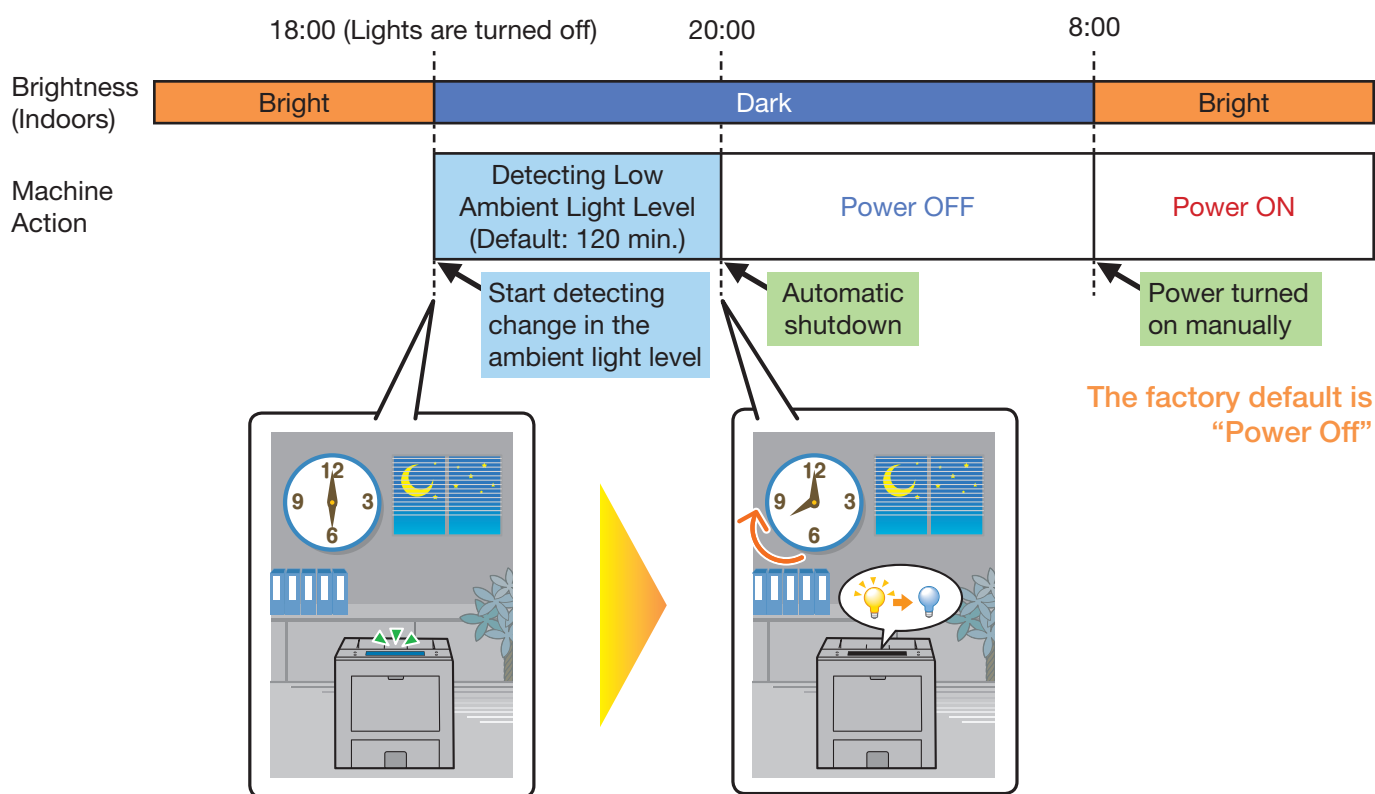

## The Function Settings

You can configure the following settings of this function to suit your work environment:

Configurable Item	Setting	Factory Default Setting
Function	Power Off/Sleep Mode/Inactive	Power Off
Timer to Turn Off	1/5/30/60/120 minutes	120 minutes
Brightness Sensor Level	Level 1 (Very Dark) – 5 (Very Bright)	Level 1

For details, see "ECO Night Sensor" under "Configuring and Managing the Printer" > "User Tools" > "System Settings" > "Administrator Tools" in Operating Instructions.

## Important

This function's factory default is [Power Off]. If the machine is located in an environment where the ambient light level is low (such as in a hallway or a location with motion sensor lighting), it is advisable that you either keep this function disabled or adjust its sensitivity.

